



Canon PowerShot ELPH 150 IS Battery Replacement

Replace the battery in a Canon PowerShot ELPH 150 IS.

Written By: Morgan Forester



INTRODUCTION

This guide will teach you how to replace the battery for your camera.

Step 1 — Battery



- Safety First: Power off your device. Locate the On/Off button.

Step 2



- Hold button down firmly until the screen goes dark and the camera is powered off.

Step 3



- Locate the Battery door which is marked, "CARD/BATT OPEN"

Step 4



- Press the door down with your thumb and slide to the right until you hear a click. This means the door has unlocked and will open.

Step 5



- With the door open, locate the orange clip near the edge of the camera. This clip is holding the battery in place.

Step 6



- Press the orange clip back towards the back plate to release the battery.

Step 7



- The battery should pop out easily and you can simply remove the battery from its housing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-03 09:59:43 PM.